



How to turn on/off parental controls

Parental Controls help you make sure your family has access to only those shows you want them to watch. From the Home screen, select the Menu icon  then choose Settings > Parental Controls.

TURN PARENTAL CONTROLS ON/OFF

To turn Parental Controls on, use the UP/DOWN buttons on the remote control to enter a four-digit PIN, then enter the same PIN again for confirmation. When you turn off Parental Controls, the PIN is deleted and anyone can watch any show or channel.

When Parental Controls are on, a lock icon will appear on the Home screen next to the Menu icon .

HIDE ADULT CONTENT

When this setting is on, adult shows do not appear in search results, and titles/descriptions of adult shows are hidden in the program guide and My Shows. You will need to enter the Parental Controls PIN to watch any adult content.

SET RATING LIMITS

Movies originally meant for release to theaters have a different rating system from shows made for TV. Use rating limits to set rules for both rating systems.

Highlight the rating option, and then use the left/right arrows to change the rating limit.

CHANGE PIN

Enter a new PIN, then re-enter the new PIN to confirm.

Note: If you have multiple TV boxes in the home each TV box needs to have parental controls updated individually.